


WATERMARK

INSTALLATION INSTRUCTIONS FOR KIT700 KITCHEN FAUCET

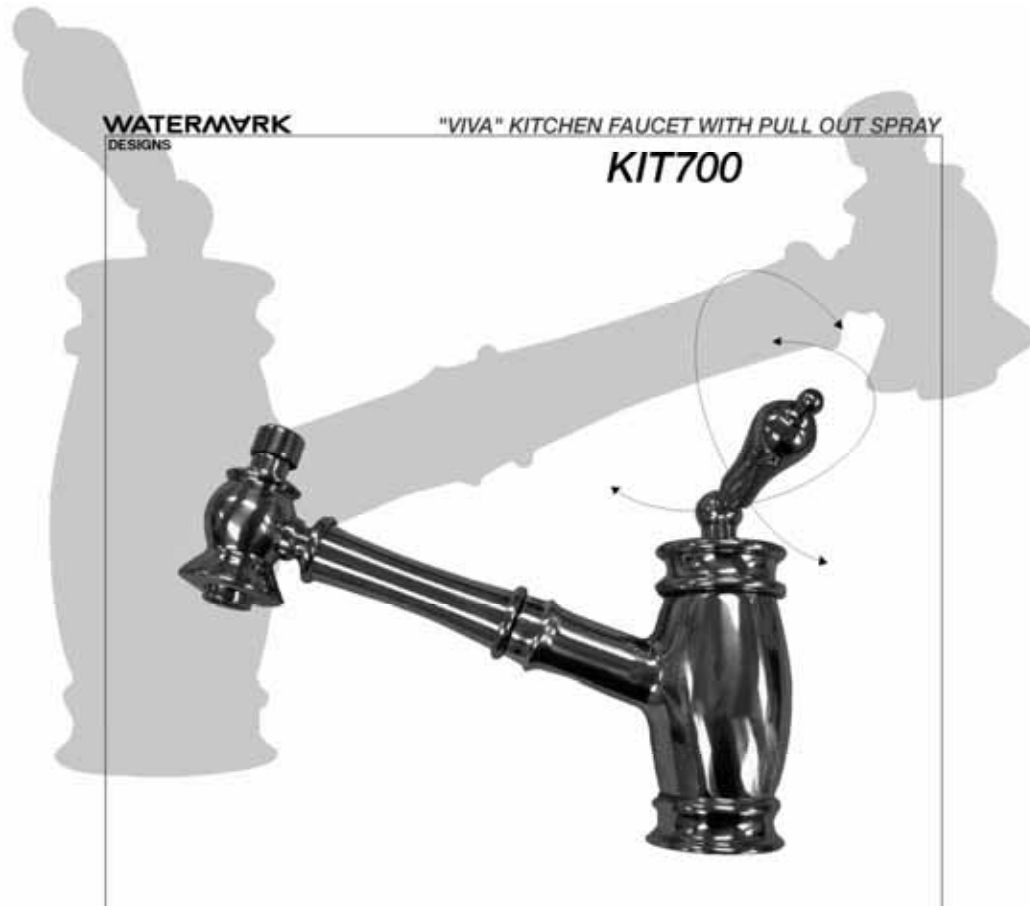

1. Make sure hole in counter top is at 1 ½”.
2. Carefully remove all parts from the box.
3. Remove lock nut and washers from faucet. Position faucet through hole in countertop or sink. Tighten the washers and lock nut against the underside of mounting surface.
4. Fasten weight on pull out hose at the desirable height on hose to ensure spray head retracts back into faucet.
5. Begin bleeding the water lines before connecting to flex hoses.
6. Connect the two flex hoses to water supply lines. These hoses can be bent or twisted, but be careful not to kink the hoses or you will have limited water supply and excessive noise from the faucet.

Features:

- Ceramic Disk Cartridge
- Integral back flow preventer
- 2.2 GPM at 45 PSI
- Stainless steel coil & long-lasting inner liner
- 1 5/8” max. Countertop installation depth