


INSTALLATION FOR THERMOSTATIC VALVES (ADDENDUM FOR NEW STYLE TRIM)


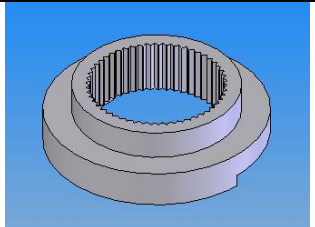
6. Install trim (this replaces step 6 on page 2 of the attached installation sheet)

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY. |
|----------|--------------------|---|------|
| 1 | SS-TFP200 | THERMO FACE PLATE | 1 |
| 2 | THERMO-DOME-LKRG | THERMO FACE PLATE LOCK RING | 2 |
| 3 | THERMO-DOME-VOL | VOLUME CONTROL DOME, screws on the valve | 1 |
| 4 | THERMO-DOME-SLEEVE | DOMES SLEEVE, screws on both Domes | 2 |
| 5 | THERMO-DOME-TEMP | Temperature Control Dome, screws on the valve | 1 |

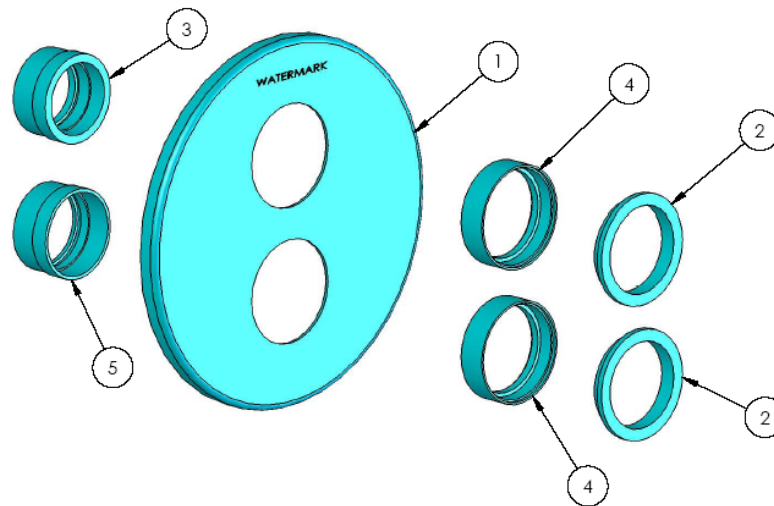

- a. Screw **Temperature Control Dome (5)** and **Volume Control Dome (3)** onto valve.
 - o Volume Control Dome (3) is for valves with built-in volume controls and does not apply to valves with separate volume controls.
 - o Please note that the **Temperature Control Dome (5)** has a larger opening than the **Volume Control Dome (3)**.
- b. Secure the **Thermostatic Face Plate (1)** onto the valve by sliding over the **Temperature Control Dome (5)** and **Volume Control Dome (3)**
- c. Screw **Dome Sleeve (4)** onto **Temperature Control Dome (5)** and **Volume Control Dome (3)**.
- d. Lock the **Thermostatic Face Plate (1)** securely against the wall using the **Thermostatic Face Plate Lock Ring (2)**.
- e. Ensure Temperature Stop ring is installed with red dot at 12 o'clock position, and thermostatic handle is installed with push button at 12 o'clock position.
 - o If thermostatic handle is a lever handle, make sure brass friction ring is installed first as per instructions on reverse side.

**THERMOSTATIC FRICTION RING INSTALLATION INSTRUCTIONS
(FOR LEVER HANDLES ONLY)**

| | | |
|---|---|---|
| 1 | FRICTION RING |  |
| 2 | THERMOSTATIC STOP RING (WHITE PLASTIC) |  |

Installation Instructions

1. Before installing the trim take the friction ring (1) and slide it over the valve until it does not slide anymore.
2. Install Thermo Stop Ring – White Plastic (2) on the temperature handle with the red dot in the 12 o'clock position.
3. Install the handle with the push button in the 12 o'clock position.