



# INSTALLATION INSTRUCTIONS FOR PRESSURE BALANCED VALVE EXTENSION KITS

MODEL # SS- EXT30

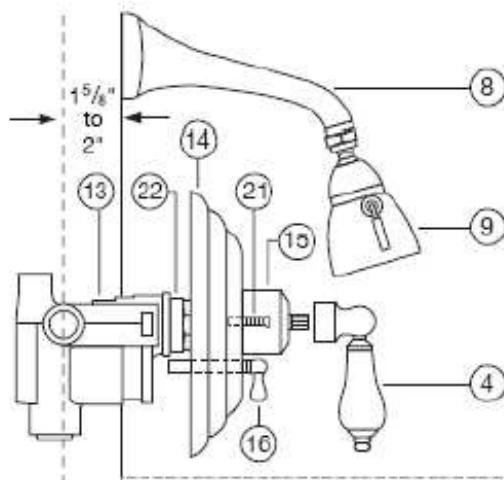

## Extension Kit

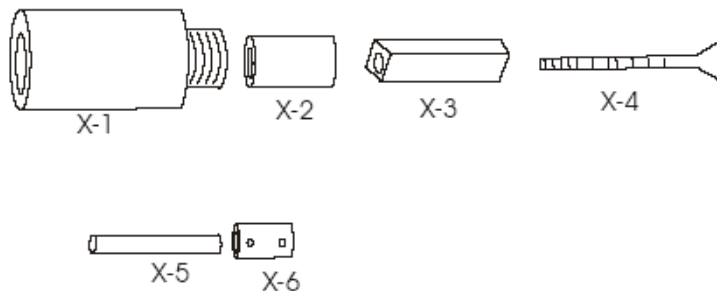

1. Remove Handle (4) Dome (15) Plate Screws (21) Plate (14), and Volume Handle (16)
2. Thread Dome extension (X-1) onto Valve
3. Attach Stem Coupling (X-2) onto Valve Cartridge
4. Insert Stem extension (X-3) into Stem Coupling (x-2) & insert screw if applicable.
5. Attach Stem Couple (X-6) onto Volume Handle Stem and tighten allen screw. Insert Stem Extension (X-5) into other end of stem coupling (X-6) and tighten Allen.
6. Reinstall Plate (14) and Volume Handle (16). Stem Extension (X-5) may need to be cut down.
7. Reinstall Dome (15) and Plate Screws (21). Plate screws (21) supplied with original trim are longer than necessary, and should work with extension. If longer screws are required, please order separately from extension (model # 3" screws f/ 6.2- Specify Finish)
8. Reinstall Handle (4) as required with allen screw or screw supplied with extension.